

TDS PRODUCT IMAGE SHEET – CATEGORY >		
CRANK ARMS & STUB SHAFTS		
Images	TDS Part Numbers & Description	OE References & (WHERE FITTED)
	CRK002A R66 CRANK ARM HOLE Ø12 & 7/8" SPLINED HOLE	CRK002A TDS
	CRK002-ASSY-01 CRK002 CRANK ARM R66 7/8" SPLINED HOLE & Ø12 HOLE FITTED WITH M12x45 STUD + LOCK NUT, SPRING WASHER	CRK002-ASSY-01 TDS Fitted to TREKA & MELLER electric door systems
	CRK003A R72 CRANK ARM Ø16mm PIN & 7/8" SPLINED HOLE	CRK003A TDS 6690826N00 32450032
	CRK006A R57 CRANK ARM Ø1/2" PIN & 7/8" SPLINED HOLE	214972 Peters 66902099 DP038163 DEP-00191 DAE537
	CRK007A R57 CTRS CRANK ARM SPLINED ASSY Ø10 HOLE & Ø12 HOLE WITH 7/8" SPLINED CENTRE HOLE #BRG004B (203327) = BEARING BUSH IF REQUIRED	217722 Peters 33-19073-3

 <p>CRK008A</p>	<p>CRK008A R57 CRANK ARM Ø10 HOLE & 7/8" SPLINED HOLE</p>	<p>214654 <i>Peters</i></p>
 <p>CRK014A</p>	<p>CRK014A R75 CRANK ARM Ø16mm PIN 7/8" SPLINED HOLE</p>	<p>CRK014A <i>TDS</i></p> <p>6690825N00 32450120</p>
 <p>CRK016</p>	<p>CRK016A R57 CRANK ARM DOG CLUTCH</p>	<p>214195 <i>Peters</i></p>
 <p>CRK017</p>	<p>CRK017A CRANK ARM LOWER COLLAR</p>	<p>214196 <i>Peters</i></p>
 <p>CRK018A</p>	<p>CRK018A R54 CRANK ARM Ø10 HOLE & 7/8" SPLINED HOLE</p>	<p>214944 <i>Peters</i></p> <p>DP038183</p>
 <p>CRK019A</p>	<p>CRK019A R87 CRANK ARM Ø10 HOLE & 7/8" SPLINED HOLE</p>	<p>201456 <i>Peters</i></p>

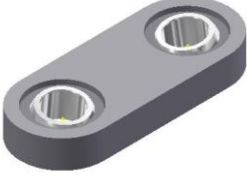
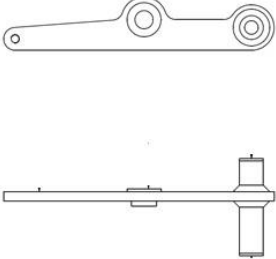

 <p>CRK020</p>	<p>CRK020A R57 CRANK ARM TAPPED HOLE M12x1.75 & 7/8" SPLINED HOLE</p>	<p>CRK020A TDS</p> <p>DP103312</p>
 <p>CRK022</p>	<p>CRK022A R59 CRANK ARM HOLE</p>	<p>D25189 Deans</p>
 <p>CRK023A</p>	<p>CRK023A R57 CTRS CRANK ARM WELD ASSY Ø10 HOLE & Ø12 HOLE</p> <p># BRG004B (203327)=BEARING BUSH IF REQUIRED</p> 	<p>214656 Peters</p>
	<p>CRK025A R80 CRANK ARM (12M/16M/12F)PIN</p>	<p>CRK025A TDS</p>
 <p>CRK026 R65</p>	<p>CRK026 R65 CRANK ARM WELD ASSY LH</p>	<p>360316 Overton</p>
 <p>CRK027 R65</p>	<p>CRK027 R65 CRANK ARM RWELD ASSY RH</p>	<p>360315 Overton 360625</p>
	<p>CRK030A R87 CRANK ARM TAPPED HOLE M12x1.75 & 7/8" SPLINED HOLE</p>	<p>CRK030A TDS</p>

	<p>CRK030-ASSY-01 R87 CRANK ARM(CRK030A) 7/8" SPLINED HOLE & Ø12 HOLE FITTED WITH M12x45 STUD + LOCK NUT, SPRING WASHER</p>	<p>CRK030-ASSY-01 TDS Fitted to TREKA manual door systems</p>
	<p>CRK031R CLEVIS CRANK ARM</p> <p># FIT WITH BUSHES BRG030 x2</p>	<p>212773R Peters</p>
	<p>CRK033 ROUND CLEVIS 87C (FOR M10 SPH RODEND)</p>	<p>216759 Peters</p>
	<p>CRK106 UPPER SPRING COLLAR</p>	<p>214192 Peters</p>
	<p>CRK108 BEARING COLLAR – OVERTON</p> <p># SEE BRG048</p>	<p>Overton See 220137</p>
	<p>CRK200 R51 CRANK ARM HOLE</p>	<p>013150 Deans</p>
	<p>CRK202 R88 CRANK ARM DEANS</p>	<p>D24169 Deans</p> <p>66902693</p>

	<p align="center">STB001A STUBSHAFT ASSY- Ø22 GLIDER 64mm From underside of arm to Top of splines</p>	<p align="center">200328 <i>Peters</i></p> <p align="right">DP038179 DAE535</p>
	<p align="center">STB002A STUBSHAFT ASSY-GLIDER 92mm From underside of arm to Top of splines</p>	<p align="center">215572 <i>Peters</i> 214647 <i>Peters</i></p> <p align="right">66900294 DP038169 DEP-00383 69L0026</p>
	<p align="center">STB003A STUBSHAFT ASSY-GLIDER 98mm Ø22 From underside of arm to Top of splines</p>	<p align="center">217495 <i>Peters</i></p>
	<p align="center">STB004A STUBSHAFT ASSY-FOLDER 84mm Ø22 From underside of arm to Top of splines</p>	<p align="center">200327 <i>Peters</i></p> <p align="right">DP038182</p>
	<p align="center">STB005A STUBSHAFT ASSEMBLY Ø22 RH ELECTRIC FLUSH GLIDER</p>	<p align="center">215357 <i>Peters</i></p>
	<p align="center">STB007A STUBSHAFT ASSY- FOLDER & GLIDER 105mm Ø22 From underside of arm to Top of splines</p>	<p align="center">214448 <i>Peters</i></p>

	<p>STB008A STUBSHAFT ASSY-GLIDER 115mm Ø22 From underside of arm to Top of splines</p>	<p>***** Peters</p>
	<p>STB009A STUBSHAFT ASSY-FOLDER 76mm Ø22 & Ø25 From underside of arm to Top of splines</p>	<p>200510 Peters</p>
	<p>STB010A Ø25 STUBSHAFT ASSY</p>	<p>STB010A TDS 32450034</p>
	<p>STB011A DOOR GUIDE SHAFT</p>	<p>200879 Peters</p>
	<p>STB012A STUBSHAFT D/SPLINED Ø22-25-22</p>	<p>217717 Peters 33-11142</p>
	<p>STB013A Ø25 DRIVE SHAFT PLAIN</p>	<p>STB013A TDS</p>
	<p>STB014A 120mm Ø22 DRIVE SHAFT PLAIN</p>	<p>200872 Peters</p>

	<p>STB015 DRIVE SHAFT</p>	<p>H102186 <i>Deans</i></p>
	<p>STB016 DRIVE SHAFT CLAMP PLATE</p>	<p>H102189 <i>Deans</i></p>
	<p>STB017A STUBSHAFT ASSY Ø22 RH ELECTRIC FOLDER</p>	<p>214430 <i>Peters</i></p>
	<p>B470 PS MICROSWITCH CAM SHAFT 15MM # SECURING SCREW = A210</p>	<p>B470 <i>Ventura</i> DED-00218 DSP-00090 42-5145-178</p>
	<p>C215 LEVER SHAFT LH</p>	<p>C215 <i>Ventura</i> DED-00168</p>
	<p>C258 CLASP LEVER</p>	<p>C258 <i>Ventura</i> DED-00210</p>

	<p>E420 PS SPACER ARM MOUNTED</p>	<p>E420 <i>Ventura</i></p> <p>DED-00332 42-5145-420</p>
	<p>O677 CENTRAL LEVER ASSY</p>	<p>O677 <i>Ventura</i></p> <p>DEV-00302</p>
	<p>VA1588 PS MICROSWITCH CAM SHAFT 12MM</p> <p># SECURING SCREW = A210</p>	<p>VA1588 <i>Ventura</i> WB GEMINI DD PS2</p> <p>6690817E01</p>