




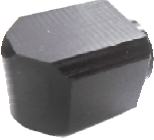





**TDS PRODUCT IMAGE SHEET – CATEGORY >**









**FIXINGS, SPACERS & STOPS**









Images	TDS Part Numbers & Description	OE References
	<p><b>ASY070</b> BUMP STOP ASSY</p>	<p><b>0102437</b> <i>Deans</i></p>
	<p><b>CAP001A</b> 35mm RD END CAP BLACK (FITTED TO TDS L500-05 BRG ASSY)</p>	<p><b>CAP001A</b> <i>TDS</i>  6690818N00 32450049</p>
	<p><b>CAP009</b> M16x40 BLACK NUT CAP</p>	<p><b>CAP009</b> <i>TDS</i> (ISAF DOOR GUIDE SPINDLE OPTARE VEHICLES)  AM450117</p>
	<p><b>CAP016</b> NEOPRENE CAP – ½”  <b>CAP017</b> NEOPRENE CAP – 5/16” WILL FIT OVER M8 HEX HD SCREW</p>	<p><b>046458</b> <i>Deans</i>  <b>CAP017</b> <i>TDS</i></p>
	<p><b>CIR001A</b> CIRCLIP INTERNAL 1300-34 (stainless steel to fit 34mm dia bore)</p>	<p><b>205074</b> <i>Peters</i>  DEP-00156</p>
	<p><b>CIR002A</b> EXTERNAL E CIRCLIP N1500-0050 <b>CIR003A</b> EXTERNAL E CLIP D1500-0090  <b>CIR007A</b></p>	<p><b>205105</b> <i>Peters</i> DEP-00239 32450048  <b>205108</b> <i>Peters</i>  <b>CIR007A</b> <i>TDS</i></p>

	<p>HINGE PIN E CLIP  <b>CIR008A</b>          EXTERNAL E CIRCLIP          D1500-0120</p>	<p><b>205110</b> Peters          32450049</p>
	<p><b>CIR009A</b>          EXTERNAL CICLIP 1400-3/8            (USED ON DEANS 16DIA          DOOR GUIDE SPINDLES)</p>	<p><b>070002</b> Deans  <b>75-19627</b> Deans            DED-00017          66902888</p>
	<p><b>GDE001A</b>          GUIDE SHOE</p>	<p><b>GDE001A</b> TDS          (ALL TREKA BUS VEHICLES)            DT565000/25          33-11126</p>
	<p><b>L500-50-01/2/3</b>          ACTIVE BUMP STOP ASSY          BLACK = 01          CREAM = 02          BLUE = 03</p>	<p><b>H102672</b> Deans  <b>L500-50-01/2/3</b> TDS            DEP-103306          32450035          29450035</p>
	<p><b>L500-012</b>          DOOR STOP COLLAR          (PAINTED BLACK)          Ø20x19xM8</p>	<p><b>L500-12</b> TDS            32450041</p>
	<p><b>NUT-Q-02</b>          M6 DOOR BARREL NUT</p>	<p><b>200398</b> Peters            DAE565          88-11230</p>
	<p><b>NUT7-16HN-MS</b>          LOCK NUT FOR UNIBALL E13306</p>	<p><b>E16422</b> Deans            NHUT-0725</p>

	<p><b>NUT05-HN-MS</b> M5 HEX NYLOC NUT</p> <p><b>NUT08-HN-MS</b> M8 HEX NYLOC NUT</p>	<p><b>071002</b> <i>Deans</i></p> <p><b>071007</b> <i>Deans</i></p>
	<p><b>NUT12-HH-MS</b> M12 HALF HEX NUT</p> <p><b>NUT16-HH-MS</b> M16 HALF HEX NUT</p>	<p><b>204221</b> <i>Peters</i></p> <p><b>071041</b> <i>Deans</i></p> <p style="text-align: right;">69L0020 DEP103317</p> <p><b>071082</b> <i>Deans</i></p>
	<p><b>NUTSP-05</b> CHROME 1/2" STARLOCK WASHER</p>	<p><b>044066</b> <i>Deans</i></p>
	<p><b>NUTSP-06</b> M4 TURN BUCKLE WITH RH &amp; LH THREADS</p>	<p><b>400193</b> <i>Deans</i></p>
	<p><b>PIN001</b> M5x50 grooved spring pin</p>	<p><b>214510</b> <i>Peters</i></p>
	<p><b>PIN002</b> M3x40 grooved spring pin</p>	<p><b>214511</b> <i>Peters</i></p>
	<p><b>PIN003A</b> M1.5x12 SPRING PIN</p>	<p><b>PIN003A</b> <i>TDS</i></p>
	<p><b>PIN010A</b> M3x20 SPIROL PIN BZP</p>	<p><b>PIN010A</b> <i>TDS</i></p>
	<p><b>PLG001A</b> SABOT DOME PLUG</p>	<p><b>PLG001A</b> <i>TDS</i></p> <p style="text-align: right;">29455081</p>

	<p><b>PLG002A</b> BLACK DOME PLUG (ATF STRIKER &amp; HANDRAIL LOCKNUT ACCESS)</p>	<p><b>PLG002A</b> TDS</p> <p>32450051 29450019</p>
	<p><b>PLG005</b> 5DIA NYLON PLUG - DEANS KKT</p>	<p><b>0100603</b> Deans</p>
	<p><b>PLG011B</b> M6x27 FIRTREE BUTTON BLACK</p>	<p><b>215144</b> Peters</p> <p>DEP-00135 32450050</p>
	<p><b>PP004-NY</b> CLUTCH PIN NYLON</p>	<p><b>PP004-NY</b> TDS</p>
	<p><b>SCR001A</b> M12x35mm HXHD SPL SCREW</p>	<p><b>215553</b> Peters</p> <p>69L0016</p>
	<p><b>SCR009</b> WOODRUFF KEY</p>	<p><b>0102432</b> Deans</p>
	<p><b>SCR100610MA8</b> M6x10 SLOT-MUSHROOM HD BLACK NYLON SCREW</p>	<p><b>SCR100610MA8</b> TDS</p>
	<p><b>SCR11225-A1</b> M12x25 HEX HEAD SCREW</p>	<p><b>204358</b> Peters</p> <p>DEP-00114 DEP103314</p>
	<p><b>SCR20816-A2</b> M8x16 BUTTON HD SOC SCREW</p>	<p><b>073031</b> Deans</p> <p>DEP103283</p>

	<p><b>SCR20820-A2</b>  <span style="background-color: yellow;">(SHOWN)</span>  M8x20 BUTTON HD SOC SCREW</p> <p><b>SCR21045-A2</b>  M10x45 BUTTON HD SOC SCREW</p>	<p><b>073030</b> <i>Deans</i>  DEP103284</p> <p><b>037172</b> <i>Deans</i>  16R0114  66902855</p>
	<p><b>SCR30330-A2</b>  M3x30 SOC SCREW BZP</p>	<p><b>SCR30330-A2</b> <i>TDS</i></p>
	<p><b>SCR30816-A4</b>  M8x16 SOC HD SCREW</p> <p><b>SCR30820-A4</b>  M8x20 SOC HD SCREW</p>	<p><b>073053</b> <i>Deans</i>  669082913</p> <p><b>SCR30820-A4</b> <i>TDS</i>  DEV-00077</p>
	<p><b>SCR30875M-A4</b>  M8x75 SOC BOLT</p>	<p><b>H103925</b> <i>Deans</i></p>
	<p><b>SCR31460-A4</b>  M14x60 SOC HD SCREW  (TDS IG DOORSHAFTS)</p>	<p><b>SCR31460-A4</b> <i>TDS</i></p> <p>29450017</p>
	<p><b>SCR41640-A2</b>  M16x40 SOC HD  SHOULDER BOLT x M12  (REAR IG CYLINDER SECURE)</p>	<p><b>SCR41240-A2</b> <i>TDS</i></p> <p>32450029</p>
	<p><b>SCR50508-A1</b>  M5x8 CSK SOC HD SCREW</p> <p><b>SCR50640-A1</b>  M6x40 CSK SOC HD SCREW</p> <p><b>SCR50660-A1</b>  M6x60 CSK SOC HD SCREW</p>	<p><b>SCR50508-A1</b> <i>TDS</i></p> <p><b>SCR50640-A1</b> <i>TDS</i></p> <p><b>SCR50660-A1</b> <i>TDS</i></p>
	<p><b>SCR50820-A5</b>  M8x20 CSK SOCKET SS SCREW</p>	<p><b>204730</b> <i>Peters</i></p> <p><b>073701</b> <i>Deans</i></p>

	<p><b>SCR50825-A5</b> M8x25 CSK SOCKET SS SCREW</p>	<p><b>0110322</b> <i>Deans</i> 204730 <b>204730</b> <i>Peters</i></p>
	<p><b>SCR70625-PA1</b> M6x25 PAN TAPTITE SCREW</p>	<p><b>SCR70625-PA1</b> TDS</p>
	<p><b>SCR80616CA10</b> No6x5/8" CSK POZI BLK (BUTTON FIXING SCREW)</p>	<p><b>SCR80616CA10</b> TDS</p>
	<p><b>SCR80809PA-10</b> No8x3/8" SELFTAP PAN POZI BLK</p>	<p><b>SCR80809PA-10</b> TDS</p>
	<p><b>SCR81020-FA1</b> No10x3/4" SELFTAP FLANGED SCREW</p>	<p><b>SCR81020-FA1</b> TDS DEP103339</p>
	<p><b>SCR81025-PA1</b> No10x1" SELFTAP PAN SCREW</p>	<p><b>SCR81025-PA1</b> TDS</p>
	<p><b>SCR81220-PA1</b> No12x3/4" SELFTAP PAN SCREW</p>	<p><b>SCR81220-PA1</b> TDS DEP103290</p>
	<p><b>SCR90606-C2</b> M6x6 GRUB SCREW</p>	<p><b>SCR90606-C2</b> TDS 32450063</p>
	<p><b>SPA007</b> DEANS BRACKET SPACER</p>	<p><b>H102218</b> <i>Deans</i></p>

	<p><b>SPA008</b> ADAPTOR RING FOR LINAK MOTOR INSIDE CRK031</p>	<p><b>215744</b> <i>Peters</i></p>
	<p><b>SPA010</b> Ø14.0 BORE x 13.0 PIVOT SPACER</p>	<p><b>E24527</b> <i>Deans</i></p>
	<p><b>SPA011</b> Ø14.0 BORE x 10.0 PIVOT SPACER</p>	<p><b>E26099</b> <i>Deans</i></p>
	<p><b>SPA012</b> Ø12.7 BORE x 7.5 PIVOT SPACER</p>	<p><b>025071</b> <i>Deans</i></p>
	<p><b>SPA027</b> ALUM M8 SPACER</p>	<p><b>H101626</b> <i>Deans</i></p>
	<p><b>SPA029</b> REAR MOUNTING SPACER COLLAR (To take Ø12x40 pins PVP005)</p>	<p><b>214666</b> <i>Peters</i></p>
	<p><b>SPA030-45</b> M8x45 M-F SPACER</p>	<p><b>215705</b> <i>Peters</i></p> <p style="text-align: right;">DEP-00482</p>
	<p><b>SPA032</b> LINAK INTERFACE PLATE</p>	<p><b>SPA032</b> <i>TDS</i></p>
	<p><b>SPA034</b> RUBBER LOCK BRACKET SPACER (used with glass mounted lock handle HDL039T/ANC001)</p>	<p><b>SPA034</b> <i>TDS</i></p> 



	<p><b>SPA035</b> =1xSPACER – Deans. used as a pair</p>	<p><b>0104558</b> <i>Deans</i></p>
	<p><b>SPA037</b> REAR PIVOT BEARING SPACER</p>	<p><b>0106981</b> <i>Deans</i></p>
	<p><b>SPL001A</b> Ø12x20mm (19AF) HEX HD CAP NUT internal thread=M8x1.25</p>	<p><b>201351</b> <i>Peters</i></p> <p>DAE560 33-11119</p>
	<p><b>STP001A</b> STOP COLLAR LONG Ø20x30xM8</p>	<p><b>216267</b> <i>Peters</i></p>
	<p><b>STP002</b> M6x20(16) <b>STP003</b> M10x60(25) <b>STP004</b> M8x60(22)</p> <p><b>STP012</b> M16x90(22) RUBBER STOP (USED ON DEANS PS)</p>	<p><b>STP002</b> <i>TDS</i></p> <p><b>STP003</b> <i>TDS</i></p> <p><b>STP004</b> <i>TDS</i></p> <p><b>H102289</b> <i>Deans</i></p>
	<p><b>STP010</b> ACTIVE STRIKER (TDS IG DOORSHAFT)</p>	<p><b>STP010</b> <i>TDS</i></p> <p>29450018</p>



	<p><b>STP010-KIT</b> ACTIVE STRIKER KIT (TDS IG DOORSHAFT)</p>	<p><b>STP010-KIT</b> TDS</p>
	<p><b>STP013</b> Ø25 RUBBER STOP M12x1.75 x 60 STUD</p>	<p><b>STP013</b> TDS</p>
	<p><b>WAS03RT-01</b> M3 SELF RETAIN WASHER</p>	<p><b>215537</b> Peters</p>
	<p><b>WAS06PL-M2</b> M6x1.5xØ30 MUDGUARD WASHER</p>	<p><b>WAS06PL-M2</b> TDS</p>
	<p><b>WAS08PL-A1</b> M8x1.6xØ17 PLAIN FORM A WASHER</p>	<p><b>WAS08PL-A1</b> TDS</p>
	<p><b>WAS08SP-B1</b> M8 SPRG RECT WASHER</p>	<p><b>WAS08SP-B1</b> TDS  DEP103285</p>
	<p><b>WAS9.7PL-SP2</b> THRUST RACE WASHER</p>	<p><b>068005</b> Deans</p>
	<p><b>WAS10PL-A1</b> M10x2xØ21 PLAIN FORM A WASHER</p> <p><b>WAS10PL-B1</b> M10x1.2xØ21 PLAIN FORM A WASHER</p>	<p><b>298163</b> Peters</p>

	<p><b>WAS12PL-A1</b> M12x2.5x Ø24 PLAIN FORM A WASHER</p> <p><b>WAS12PL-B1</b> M12x1.6xØ24 PLAIN FORM B WASHER</p> <p><b>WAS12PL-C1</b> M12x2.5x Ø28 PLAIN FORM C WASHER</p> <p><b>WAS12PL-G1</b> M12x2.6xØ35 PLAIN FORM G WASHER</p>	<p><b>203860</b> <i>Peters</i></p> <p><b>203866</b> <i>Peters</i></p> <p><b>WAS12PL-C1</b> <i>TDS</i> DEP-00115 DEP103315</p> <p><b>204041</b> <i>Peters</i> DEP-00222 DEP103316</p>
	<p><b>WAS12PL-G8</b> M12x2.5xØ24 NYLON WASHER</p>	<p><b>203937</b> <i>Peters</i></p>
	<p><b>WAS12PL-S1</b> M12x1.5xØ24 NYLON HINGE GREY THRUST WASHER</p>	<p><b>WAS12PL-S1</b> <i>TDS</i></p>
	<p><b>WAS12SP-B1</b> WASHER M12 SPRING RECT</p>	<p><b>203924</b> <i>Peters</i></p>
	<p><b>WAS12WA-A5</b> WAVEY WASHER</p>	<p><b>215552</b> <i>Peters</i>  32450069</p>
	<p><b>WAS18PL-M8</b> M18 NYLON 1.6 WASHER</p>	<p><b>216029</b> <i>Peters</i></p>
	<p><b>WAS3-4PL-G8</b> WASHER 3/4 ID NYLON x2 THK</p>	<p><b>214663</b> <i>Peters</i></p>
	<p><b>A208</b> NUT DIN 934 M10 ZP</p>	<p><b>A208</b> <i>Ventura</i>  DED-00180 6690829S01 DP039834</p>

	<p><b>A222</b> RETAINING RING DIN 471 A12</p>	<p><b>A222</b> <i>Ventura</i></p> <p>DED-00307 42-5145-222</p>
	<p><b>A249</b> M8 DIN125A WASHER ZP</p>	<p><b>A249</b> <i>Ventura</i></p> <p>DED-00145 42-5145-020</p>
	<p><b>A473</b> NUT DIN 985 M5 A2</p>	<p><b>A473</b> <i>Ventura</i></p>
	<p><b>A497</b> IG4 M12 NYLON WASHER</p>	<p><b>A497</b> <i>Ventura</i></p> <p>DEV-00166 6690815F75</p>
	<p><b>A696</b> BOLT DIN 933 M6x16 DM</p>	<p><b>A696</b> <i>Ventura</i></p> <p>DED-00310</p>
	<p><b>A732</b> WASHER DIN 125A M6 ZP</p>	<p><b>A732</b> <i>Ventura</i></p>
	<p><b>A735</b> NUT M16x1.5</p>	<p><b>A735</b> <i>Ventura</i></p> <p>DEV-00171 6690801F117</p>
	<p><b>A741</b> CABLE FIXER 4mm</p>	<p><b>A741</b> <i>Ventura</i></p> <p>DEV-00273 DP736837</p>

	<p><b>A757</b> RETAINING RING DIN 471 A15 x 1 ST</p>	<p><b>A757</b> <i>Ventura</i> DED-00308 6690804N33</p>
	<p><b>A760</b> BOLT M6x16 ZP</p>	<p><b>A760</b> <i>Ventura</i> DED-00171 6690801F117</p>
	<p><b>A763</b> WASHER DIN 125A M10 NYLON</p>	<p><b>A763</b> <i>Ventura</i> DEV-00391</p>
	<p><b>A764</b> NUT DIN 934 M6 ZP</p>	<p><b>A764</b> <i>Ventura</i> DED-00220</p>
	<p><b>A767</b> BOLT DIN 933 M6x25 ZP</p>	<p><b>A767</b> <i>Ventura</i> DED-00347 DP733700</p>
	<p><b>A768</b> BOLT DIN 933 M8x16 ZP</p>	<p><b>A768</b> <i>Ventura</i> DED-00309 DP736436</p>
	<p><b>A775</b> BOLT M10x20 ZP</p>	<p><b>A775</b> <i>Ventura</i> DED-00212</p>
	<p><b>A808</b> NUT DIN 934 M8 DM</p>	<p><b>A808</b> <i>Ventura</i> DEV-00164 DEV-00379 66903818</p>

	<p><b>A839</b> SCREW DIN 7991 M5x10 ZP</p>	<p><b>A839</b> <i>Ventura</i></p> <p>DED-00252</p>
	<p><b>A845</b> BOLT DIN 933 M8x20 DM</p>	<p><b>A845</b> <i>Ventura</i></p> <p>DED-00223 6690836S01</p>
	<p><b>A851</b> NUT DIN 934 M5 ZP</p>	<p><b>A851</b> <i>Ventura</i></p> <p>DEV-00368</p>
	<p><b>A889</b> DOORSTOP</p>	<p><b>A889</b> <i>Ventura</i></p> <p>6690811L010</p>
	<p><b>A891</b> BOLT DIN 912 M6x20 DM</p>	<p><b>A891</b> <i>Ventura</i></p> <p>DED-00142 42-5145-016</p>
	<p><b>A898</b> WASHER DIN 125A M5 A2</p>	<p><b>A898</b> <i>Ventura</i></p> <p>DED-00348 DP733701</p>
	<p><b>A988</b> BOLT DIN 912 M5x20 A2 <b>B492</b> NUT DIN 912 M5x12 A2</p>	<p><b>A988</b> <i>Ventura</i> <b>B492</b> <i>Ventura</i></p> <p>DP733716</p>
	<p><b>B326</b> BOLT M6x30 <b>B486</b> BOLT M10x30</p>	<p><b>B326</b> <i>Ventura</i> <b>B486</b> <i>Ventura</i></p> <p>DED-00131 42-5145-010 DED-00394</p>

		6690823D237
	<b>B325</b> CIRCLIP DIN 471 10x1 A2	<b>B325 Ventura</b> DED-00312 DP737055
	<b>B494</b> NUT DIN 985 M8 ZP	<b>B494 Ventura</b> 6690824S01
	<b>B585</b> PIVOT BOLT M6	<b>B585 Ventura</b>
	<b>B666</b> BOLT DIN 933 M8x25 ZP	<b>B666 Ventura</b> DEV-00198 6690821S01
	<b>B706</b> PS ROLLER BOLT M10x40	<b>B706 Ventura</b> DED-00247 42-5145-706
	<b>B713</b> NUT DIN 934 M8 L ZP	<b>B713 Ventura</b> DED-00201
	<b>B969</b> BOLT M10x25 ZP	<b>B969 Ventura</b> DED-00313
	<b>C242</b> WASHER DIN 9021 M6 A2	<b>C242 Ventura</b> DP733698

	<p><b>C252</b> BOLT DIN 912 M5x50 A2</p>	<p><b>C252</b> <i>Ventura</i> DED-00237 DP737052</p>
	<p><b>C272</b> HANDRAIL NYLON CAP</p>	<p><b>C272</b> <i>Ventura</i> DED-00505 6690810N00</p>
	<p><b>C397</b> SCREW DIN 7981 ST4 8x25 A4</p>	<p><b>C397</b> <i>Ventura</i> DEV-00126 6690834S01</p>
	<p><b>C456</b> Screw Din 916 M8x10 ZP</p>	<p><b>C456</b> <i>Ventura</i> DEV-00376 6690806N26</p>
	<p><b>C492</b> VIBRATION DAMPER 20x15</p>	<p><b>C492</b> <i>Ventura</i> DED-00138 42-5145-166 1780300</p>
	<p><b>C506</b> BOLT DIN 912 M6x50 DM</p>	<p><b>C506</b> <i>Ventura</i> DED-00238 DP737053</p>
	<p><b>D326</b> SPACER RING D=21 POM</p>	<p><b>D326</b> <i>Ventura</i> DED-00297 DP737054</p>
	<p><b>D452</b> BOLT DIN 933 M8x12 ZP</p>	<p><b>D452</b> <i>Ventura</i> DEV-00393 42-5145-021</p>



	<p><b>D539</b> PS DOOR ARM TORX FIXING M12x30</p>	<p><b>D539</b> <i>Ventura</i> DED-00134 42-5145-014 32455028</p>
	<p><b>D760</b> PS ROLLER SPACER 16/10 # ROLLER + H750, SECURE BOLT B706</p>	<p><b>D760</b> <i>Ventura</i> DED-00262 6690816D31 42-5145-760 1780494</p>
	<p><b>D806</b> BOLT DIN 912 M6x12 DM</p>	<p><b>D806</b> <i>Ventura</i> DEV-00162 DP733705</p>
	<p><b>D870</b> SK LOCKING DISK SPRING M8</p>	<p><b>D870</b> <i>Ventura</i> DED-00513 6690801N26 6690804N41</p>
	<p><b>D978</b> SPACER SHAFT</p>	<p><b>D978</b> <i>Ventura</i></p>
	<p><b>E009</b> SK LOCKING DISK M6</p>	<p><b>E009</b> <i>Ventura</i> DED-00326 6690801F84</p>
	<p><b>E010</b> SK LOCKING DISK M10</p>	<p><b>E010</b> <i>Ventura</i> DED-00327 6690830S01</p>
	<p><b>E092</b> NUT DIN 439B M8 ZP</p>	<p><b>E092</b> <i>Ventura</i> DEV-00399 6690817D237</p>

	<p><b>E199</b> CIRCLIP DIN 472 <math>\phi</math>47 S=1.75</p>	<p><b>E199</b> <i>Ventura</i></p>
	<p><b>E234</b> LUBRICATOR NIPPLE M6-180</p>	<p><b>E234</b> <i>Ventura</i> DED-00328</p>
	<p><b>E240</b> NUT 3xD M5</p>	<p><b>E240</b> <i>Ventura</i> 33-11194-1</p>
	<p><b>E241</b> SCREW DIN 963 M5x25 BLACK</p>	<p><b>E241</b> <i>Ventura</i></p>
	<p><b>E322</b> Locking Collar</p>	<p><b>E322</b> <i>Ventura</i></p>
	<p><b>E478</b> BOLT DIN 931 M8x110 ZP</p>	<p><b>E478</b> <i>Ventura</i> 6690813S01 DEV-00306 6690807S01</p>
	<p><b>E567</b> WASHER M5 A2</p>	<p><b>E567</b> <i>Ventura</i> DEV-00283</p>
	<p><b>E692</b> BOLT DIN 912 M8x35 ZP</p>	<p><b>E692</b> <i>Ventura</i> 6690828237</p>
	<p><b>F010</b> SPACER 19-15 L=5</p>	<p><b>F010</b> <i>Ventura</i> DEV-00366 6690809N127</p>

	<p><b>F033</b> SCREW DIN 916 M10x20 ZP</p>	<p><b>F033</b> <i>Ventura</i></p>
	<p><b>F534</b> BOLT M8x18 ZP</p>	<p><b>F534</b> <i>Ventura</i></p>
	<p><b>F591</b> NUT DIN 933 M6x12 ZP</p>	<p><b>F591</b> <i>Ventura</i> DP733718</p>
	<p><b>F693</b> SCREW DIN 7380 TX M8x16 DP</p>	<p><b>F693</b> <i>Ventura</i></p>
	<p><b>F716</b> BOLT DIN 931 M8x100 ZP</p>	<p><b>F716</b> <i>Ventura</i></p>
	<p><b>G112</b> BOLT DIN 912 M5x16 A2</p>	<p><b>G112</b> <i>Ventura</i> DP733708 DEV-00309</p>
	<p><b>G202</b> RUBBER ENDSTOP</p>	<p><b>G202</b> <i>Ventura</i> DEV-00016 6690822D177</p>

	<p><b>G260</b> CABLE CLAMP</p>	<p><b>G260</b> <i>Ventura</i></p>
	<p><b>G419</b> SK LOCKING DISK M5</p>	<p><b>G419</b> <i>Ventura</i> DEV-00362 6690822S01</p>
	<p><b>G613</b> BLIND RIVET NUT</p>	<p><b>G613</b> <i>Ventura</i> DEV-00135 6690808N00</p>
	<p><b>G756</b> RETAINING CLIP (F681 SHAFT ARM BEARING)</p>	<p><b>G756</b> <i>Ventura</i> DED-00501 6690800N226</p>
	<p><b>G932</b> IG HANDRAIL BOLT</p>	<p><b>G932</b> <i>Ventura</i> DED-00481 669003F60</p>
	<p><b>G989</b> PIVOT PIN</p>	<p><b>G989</b> <i>Ventura</i> =</p>
	<p><b>H047</b> IG3 DOORSHAFT HEIGHT ADJUSTER</p>	<p><b>H047</b> <i>Ventura</i> DEV-00879 6690807N39</p>
	<p><b>H110</b> PIN</p>	<p><b>H110</b> <i>Ventura</i></p>

	<p><b>H114</b> SK LOCKING DISK M16</p>	<p><b>H114</b> <i>Ventura</i> DEV-00169 6690802F117</p>
	<p><b>H119</b> IG DOOR MECH SPACER 30mm</p>	<p><b>H119</b> <i>Ventura</i> DED-00511 6690801F75 6690800N127</p>
	<p><b>H166</b> SCREW DIN 7981 ST4 8x16 C-H DP</p>	<p><b>H166</b> <i>Ventura</i> DEV-00426</p>
	<p><b>H425</b> M8x35 HEX HD SCREW 8.8 BZP</p>	<p><b>H425</b> <i>Ventura</i> DEV-00176 DP736922</p>
	<p><b>H470</b> IG PRECISION BOLT LOW</p>	<p><b>H470</b> <i>Ventura</i> FXM-00128 6600030N33</p>
	<p><b>H671</b> SCREW M8x25 TORX ZP</p>	<p><b>H671</b> <i>Ventura</i> 6690802N26</p>
	<p><b>H699</b> SCREW M8x16 TORX ZP</p>	<p><b>H699</b> <i>Ventura</i> DED-00440 6690803N26</p>
	<p><b>H832</b> SCREW M5x8 WITH FLANGE A2</p>	<p><b>H832</b> <i>Ventura</i> DEV-00183 6690825D177</p>

	<p><b>H901</b> IG HANDRAIL PLASTIC SPACER</p>	<p><b>H901</b> <i>Ventura</i> DED-00480 6690002F60</p>
	<p><b>H916</b> SCREW DIN 7981 ST4.2x13 C-H DP</p>	<p><b>H916</b> <i>Ventura</i></p>
	<p><b>I020</b> WASHER SPECIAL M8 (FOR GUIDE SPINDLES)</p>	<p><b>I020</b> <i>Ventura</i> DEV-00367 6690806N127</p>
	<p><b>I024</b> SCREW DIN 7380 10 9TX M8x30 DM</p>	<p><b>I024</b> <i>Ventura</i> DEV-00100 6690806N127</p>
	<p><b>I221</b> IG3 PIVOT SPACER RING (DOORSHAFT ARM)</p>	<p><b>I221</b> <i>Ventura</i> DEV-00517 6690806N00 1896093</p>
	<p><b>I224</b> LOCKING NUT M16x1.5</p>	<p><b>I224</b> <i>Ventura</i> DEA-00270 6690827D31</p>
	<p><b>I242</b> NUT M10 DIN 439B INOX</p>	<p><b>I242</b> <i>Ventura</i> DEV-00878</p>
	<p><b>I369</b> SOFT STOP BUSH PU Ø16Ø6,5 L=16</p>	<p><b>I369</b> <i>Ventura</i></p>
	<p><b>I371</b> PS OVERCENTRE SOFT STOPPER ASSY</p>	<p><b>I371</b> <i>Ventura</i> 6690805N33</p>

	<p><b>I462-001</b> PU GREEN CORD 2DIA x15MM (POTENTIOMETER BUSH)</p>	<p><b>I462-001</b> <i>Ventura</i></p>
	<p><b>I513</b> MS BOLT</p>	<p><b>I513</b> <i>Ventura</i> DP736462</p>
	<p><b>I571</b> PLUG</p>	<p><b>I571</b> <i>Ventura</i></p>
	<p><b>I572</b> GROMMET 6x9x1.5</p>	<p><b>I572</b> <i>Ventura</i> DEV-00296 6690828D237</p>
	<p><b>I915</b> BOLT DIN 912 M8x70 ZP</p>	<p><b>I915</b> <i>Ventura</i> DEV-00402</p>
	<p><b>J199</b> COVERING CAP</p>	<p><b>J199</b> <i>Ventura</i> DEV-00174 6690835S01</p>
	<p><b>J405</b> PS CATCH BLOCK (BOTTOM SUPPORT)</p>	<p><b>J405</b> <i>Ventura</i> 6690803D252 32455002</p>
	<p><b>K404</b></p>	<p><b>K404</b> <i>Ventura</i></p>



	<p><b>K684</b> BOLT DIN 933 M8x14 ZP</p>	<p><b>K684</b> <i>Ventura</i> DEV-00361 6690820S01</p>
	<p><b>L714</b> SPACER DIA 20-8.5 L=28 5</p>	<p><b>L714</b> <i>Ventura</i> DEV-00363 6690823S01</p>
	<p><b>L725</b> SK LOCKING DISK M8 A4</p>	<p><b>L725</b> <i>Ventura</i> DEV-00112 DP737059</p>
	<p><b>L812</b> IG4 DOORSHAFT HEIGHT ADJUSTER M16x100</p>	<p><b>L812</b> <i>Ventura</i> DEV-00178 6690800F117</p>
	<p><b>L886</b> IG4 PIVOT POINT BOLT</p>	<p><b>L886</b> <i>Ventura</i> DEV-00170 6690814F75</p>
	<p><b>M210</b> SCREW DIN 7380 TX M8x20 DP</p>	<p><b>M210</b> <i>Ventura</i> DEV-00125 6690833S01</p>
	<p><b>M414</b> DOOR PROFILE L463 - PLUG FOR SENS EDGE WIRE ENTRY</p>	<p><b>M414</b> <i>Ventura</i> DEV-00294 6690837S01</p>
	<p><b>M739</b> SCREW M6x16 TORX BLACK (IG FLAP COVER)</p>	<p><b>M739</b> <i>Ventura</i></p>

	<p><b>N860</b> TOGGLE NUT M8</p>	<p><b>N860</b> <i>Ventura</i> DEV-00410 6600031N33</p>
	<p><b>N944</b> PLUG FOR HOLE DIA 13 (IG PROFILE)</p>	<p><b>N944</b> <i>Ventura</i> DEV-00129 6690831S01</p>
	<p><b>O689</b> M16x60(1.5) SOC HD DOORSHAFT SCREW</p>	<p><b>O689</b> <i>Ventura</i> DEV-00200</p>
	<p><b>O697</b> PS SOFT STOP ASSY (21 Dia x 19mm L)</p>	<p><b>O697</b> <i>Ventura</i> 66908100</p>
	<p><b>O699</b> PS SOFT STOP ASSY (21 Dia x 37mm L)</p>	<p><b>O699</b> <i>Ventura</i> DEV-00264 6690834D31</p>
	<p><b>Q792</b> RUBBER LINED 18MM P CLIP</p>	<p><b>Q792</b> <i>Ventura</i></p>
	<p><b>Q916</b> CATCH BLOCK BENDED DOOR</p>	<p><b>Q916</b> <i>Ventura</i> DEV-00152</p>
	<p><b>S685</b> PS END STOP ASSY</p>	<p><b>S685</b> <i>Ventura</i></p>
	<p><b>S876</b> SOFT STOP ASSEMBLY</p>	<p><b>S876</b> <i>Ventura</i></p>

	<p><b>T778</b> GUIDE SHAFT END STOP</p>	<p><b>T778</b> <i>Ventura</i></p>
	<p><b>VA0134</b> OVERCENTRE SOFT STOPPER</p>	<p><b>VA0134</b> <i>Ventura</i></p>
	<p><b>VA0772</b> GUIDE RING (SPIRAL CABLE)</p>	<p><b>VA0772</b> <i>Ventura</i></p>
	<p><b>VA2186</b> BUSH FOR PS/RS GUIDE ROLLER BOLT (INTRODUCED 2021)</p>	<p><b>VA2186</b> <i>Ventura</i></p>
	<p><b>VA2187</b> PS/RS GUIDE ROLLER SECURE BOLT M10x35 (INTRODUCED 2021, REPLACING BOLT B486)</p>	<p><b>VA2187</b> <i>Ventura</i></p>
	<p><b>VC3491</b> CUSHIONING RING 8MM</p>	<p><b>VC3491</b> <i>Ventura</i></p>

# ALL OTHER COMMON DOOR RELATED FIXINGS AVAILABLE, A SELECTION ONLY IS SHOWN HERE.  
PLEASE ENQUIRE AS REQUIRED.